

Thanks for choosing Fantec NOVI T30 Wireless speaker. Please read this manual carefully and keep it for future reference. If there's any question regarding this product, please contact us by sending email to [service@fantec.de](mailto:service@fantec.de)

## Specification

 
 
 
 
Model	Fantec NOVI T30
Standard	Bluetooth V4.1
Support	HFP,HSP,A2DP,AVRCP,APTX
Transmission Distance	~ 10m / 33ft
Playing Time	~ 30 Hours
Charging Time	~ 6 hours
DC In	5V/1000mAh
Battery	Li-Ion 5200mAh / 3.7V / 19.24Wh
Dimension	206X69X74mm
Weight	550g

## Package Content

- 1 X Fantec NOVI T30 Portable Wireless Speaker
- 1 X USB Charging Cable
- 1 X AUX Cable
- 1 X User Manual
- 1 X Warranty Card

## Product illustration

- |                     |             |
|---------------------|-------------|
| ① Volume down       | ⑧ AUX port  |
| ② Volume up         | ⑨ Reset key |
| ③ Call Key          | ⑩ Speaker   |
| ④ ON/OFF            | ⑪ Led light |
| ⑤ Model             | ⑫ Speaker   |
| ⑥ mounting holes    | ⑬ Diaphragm |
| ⑦ USB charging port |             |

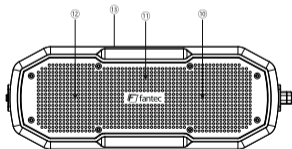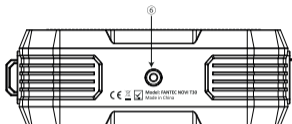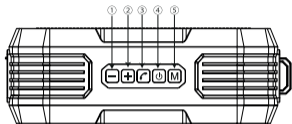

## Basic Operation



### Charging

The battery of the speaker is partially charged at the factory. Please make sure that you fully charge it before using it for the first time. Please connect the USB cable to recharge it for at least 6 hours. Red indicator will turn on when it's charging, the indicator will turn off after it's fully charged.

### Low Battery

If the battery is running low, there will be a periodic prompt and then the speaker turns off automatically. Please recharge the battery according to the instructions above.

### ON/OFF

Press and hold  for 2 seconds, you will hear turn on voice notice. Press and hold  for 2 seconds again to turn off.

## Pairing

**In order to match the speaker with your phone, you need to make the speaker to enter pairing mode.**

- 1 . Make sure the speaker is in off state.
- 2 . Blue&Red light would blink alternately when you turn it on and it's entering pairing mode at the same time. Search and connect the Fantec NOVI T30 speaker.
- 3 . The indicator will keep solid blue after pairing succeed and keep this way under playing state.

## Pairing again

The Wireless speaker will remember the last paired Bluetooth device when you turn on the speaker next time. As far as the same Bluetooth device is available it will connect automatically.






## Attention:

The Wireless speaker will be in pairing mode if it failed to pair with the last used equipment. You can reconnecting it with any other Bluetooth supported device. It is recommended to shut down power when you're not using the Wireless speaker.

The maximum operating range for the two devices is 10m (33 ft). If you move out of range, the speaker will lose connection and go into standby mode. You will need to move back to within 10m distance and reconnect to your devices with the Wireless speaker manually again.

## Playing Music

Once connected, you can play the music from your device to the NOVI T30 Wireless speaker. Music will automatically stop when there is incoming phone call, and resume manually once the call is finished. Basic operations are as follows:

Pause/Play	Short press 
Volume control	Long press the volume key  / 
Last/Next Song	double-click  enter Next Song ,press  enter last song

## Answer /Reject incoming call

Answer the phone	Press the "☎" Key
Hang up the phone	Press "☎" Key again under calling state or long press "☎" key
Redial	Long press "☎" button under Wireless mode
Reject calls	Long press "☎" key when there is incoming call

State	LED Indicator
Pairing	Blue LED flash quickly(About once a second)
Pairing success	Blue light stays on
Music play state	Blue light stays on
Calling state	Blue light stays on
Low battery alarm	Red LED flash quickly
Charging	Red light stays on
Full charged	Red light would disappear, the blue light will turn on according to the Wireless state.

## **FAQ and Trouble Shooting**

**Q : Why isn't my speaker pairing with my device (smartphone, PC, etc.)?**

A : Please make sure that your Fantec NOVI T30 speaker is powered on and in pairing mode (the LED indicator flashes blue and red). Also, to see if the Bluetooth pairing function of your smart Phone, etc. is turned on.

**Q : Why can't my speaker play audio via Aux?**

A : Please try connecting and disconnecting the 3.5mm audio cable a few times. Make sure the speaker is turned on. Sometimes, computer system may not recognize the device at first. For some computers, you may need to visit the audio control panel to manually set the speaker as the default audio device.

**Q : Can I use the speaker while it is charging?**

A : Yes, definitely! But in order to ensure the long-term performance of the battery, we recommend that you try to avoid using the speaker while charging.

**Q : The music sometimes cuts off while playing.**

A : The operation range of the speaker may be influenced by obstructions, such as walls, pillars, etc. To ensure a stable connection, we recommend avoiding such obstructions whenever possible and/or shortening the distance during use.

**Q : I turn on the speaker, but I cannot see any LED lights coming on?**

A : Please make sure that the unit is charged. If it is fully charged and still nothing happens or if you are not able to charge the unit, please contact our customer support for warranty cover.

## **Care and Maintenance**

- Keep the speaker away from heat and humidity.
- Do not put the product under direct sunlight or hot areas. High temperatures will shorten lifespan of the Speaker, battery and the internal circuit board.
- Power off the speaker when not in use and before storing.
- Do not use chemicals or detergents to clean the product.

## **Warranty**

We warrant this device for 18 MONTHS from date of the original purchase for manufacturer defects. If the device fails due to a manufacturing defect, please contact seller directly to initiate return and warranty process. Please do not return the product without seller's copy of invoice for authorization.

## **Contact Us**

We can only provide after sales service for products purchased directly from Fantec or Fantec authorized distributor. If you have purchased from a different seller, please contact them for any exchange or request. For additional assistance or warranty cover claim, please contact  
E-Mail: [service@fantec.de](mailto:service@fantec.de)