



# 2.5" MB-Bracket 25

## Installation Guide


1. Hold the bracket "upside down" in both hands so that the SATA connector is pointing to the left.

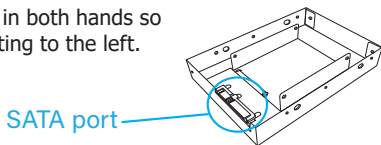


2. Clamp the SSD at an angle of 45° between the two holding surfaces, with the SSD SATA connection to the left, pointing upwards.

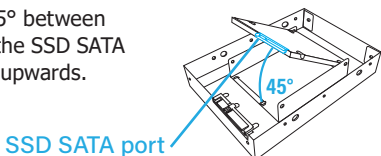


3. slide the SSD in an inclined position to the right so that there is enough space for the SSD to be placed in the horizontal position without the SATA connector getting stuck.

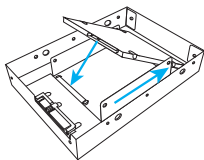

4. Carefully align the SSD horizontally and carefully slide it to the left onto the SATA connector to the left.

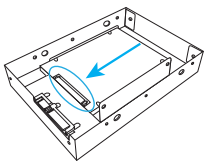

5. Align four screw holes and tighten the SSD with the four screws.

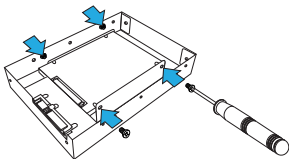


# 2.5" MB-Bracket 25

## Anleitung


1. Das Bracket "überkopf" so in beide Hände nehmen, dass der SATA Anschluss nach links zeigt.

SATA Anschluss

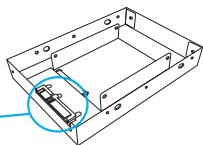


2. Die SSD in 45° Schräglage zwischen die beiden Halteflächen klemmen, mit dem SSD SATA Anschluss nach schräg links, oben zeigend.


SSD SATA Anschluss

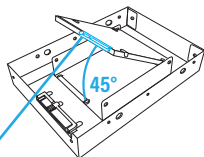

3. die SSD in Schräglage soweit nach rechts schieben, dass Platz genug entsteht, dass die SSD in die waagerechte Position gebracht werden kann, ohne dass der SATA Anschluss klemmt.

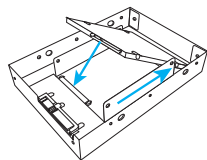

4. Die SSD vorsichtig waagrecht ausrichten und vorsichtig nach links auf den SATA Anschluss aufschieben.

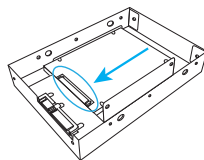

5. die vier Schraubenlöcher in Deckung bringen und die SSD mit vier Schrauben festschrauben.

